

## Assembly of the Dual Valve Tap

For the purposes of cleaning and product maintenance



1. Push plug shaft into body



2. Attach spring



3. Screw on adapter



4. Screw on ball valve



5. Screw on sample tube



6. Attach liquid inlet