

Cleaning

The head and water housing of the pump are made completely of stainless steel to avoid all risk of contamination.

1. For regular cleaning, it is sufficient to simply flush the pump with warm water or warm water with special cleaning agent.
2. If deep cleaning is needed, the head of the pump can be disassembled by removing the 4 screws. You can now open it further and clean each part as needed.
3. To reassemble the pump, please refer to the Structure Diagram above.

Warning

- This pump is not self-priming. Do not run the pump dry.
- This pump will start running when plugged in.
- Using the TD5 with an other adaptor may shorten the lifetime of the pump.

No part of this publication may be reproduced, copied, stored in a retrieval system or transmitted, in any form or by any means (electronic, mechanical, photocopying, recording or otherwise) without the prior written permission of Brouwland.



018.610.45
Magnetic Drive Pump
TD5 SST Pump House EU



018.611.45
Magnetic Drive Pump
TD5 SST Pump House UK